


Spare parts list

# 118/1 Orchestra music stand

11811-050-02 - chrome stand, walnut wooden desk

\*Rev 07

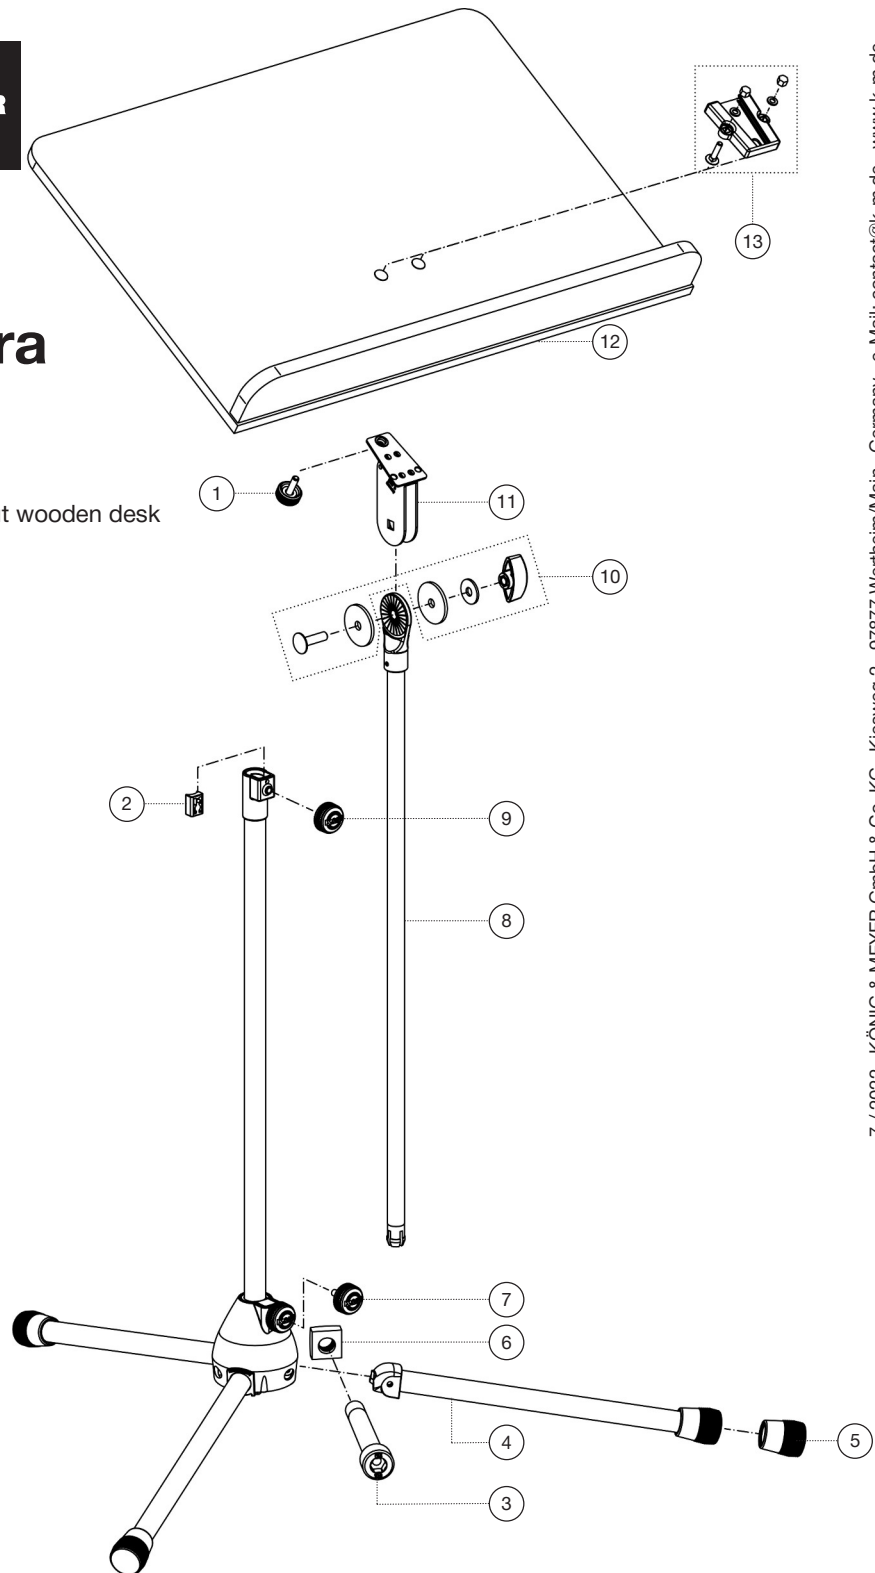

Position	Description	Article No.	Quantity
1	Knurled screw without logo M6 x 22 mm	<a href="#">01-82-837-55</a>	1
2	Clamping element with pin R7,5	<a href="#">01-86-630-55</a>	1
3	Allen screw M5 x 36 mm	<a href="#">03-02-176-29</a>	3
4	Leg tube complete	6-21025-1-02	3
5	End cap	01-84-980-55	3
6	Square nut M5	<a href="#">03-08-210-29</a>	3
7	Knurled screw with logo M6 x 22 mm	<a href="#">01-82-948-55</a>	1
8	Extension tube with swivel head ø16 mm complete	<a href="#">6-11810-3-02</a>	1
9	Knurled screw with logo M6 x 10 mm	01-82-936-55	1
10	Screw connection of the music desk	3-00-000-065	1
11	Tilt connector complete	6-11810-4-55	1
12	Music desk	03-55-165-00	1
13	Accessories bag connecting plate	3-00-000-134	1